

BCP-7000 USER INSTRUCTION

1. Execute CD-ROM \Utilities\BCP-7000\BCP7000ReadTool\Setup.exe. Install the program according to the instruction. After the installation, select Start/All Programs/BCP7000Read” to execute the program.

Read Data via Serial Port

COM Port : COM3

Baud Rate : 19200

Enter Your Password :

☐ Memorize password

☐ View the received data.

Save received data to file :

Directory : C:\Program Files\BCP7000Read

File Name : aa2.txt

Please select "2. Upload" and click "OK" to receive data.

OK Cancel

2. COM port: Select the PC port and BCP7000 port
Baud rate: Select one from 38400,19200,9600,4800. It should be in correspondence with the baud rate at BCP7000 port
Enter your password: If a password has been set at the BCP7000 port, a correct password should be entered to ensure the down procedure to be successful.
Memorize password: Whether to memorize the password you entered in previous step.
View the received data: Whether to inspect the document read from the BCP port.
Note: If the document is saved in fail when inspecting the file, you may find the backup document “BackupReceiveData.txt” in the BCP7000 program installation menu.

Save received data to file: Assign the position in the computer and the name of the document to save the data download from the BCP7000 port

3. Refer to the figure below if you ticked “View the received data”

Read Data via Serial Port

COM Port : COM2

Baud Rate : 38400

Enter Your Password :

☐ Memorize password

☒ **View the received data.**

Save received data to file :

Directory : ...


C:\Documents and Settings\Administrator\桌面

File Name : aa1.txt


Please select "2. Upload" and click "OK" to receive data.

OK Cancel

Click “OK” to start download process. When the download finish, the data inspection window will pop up.

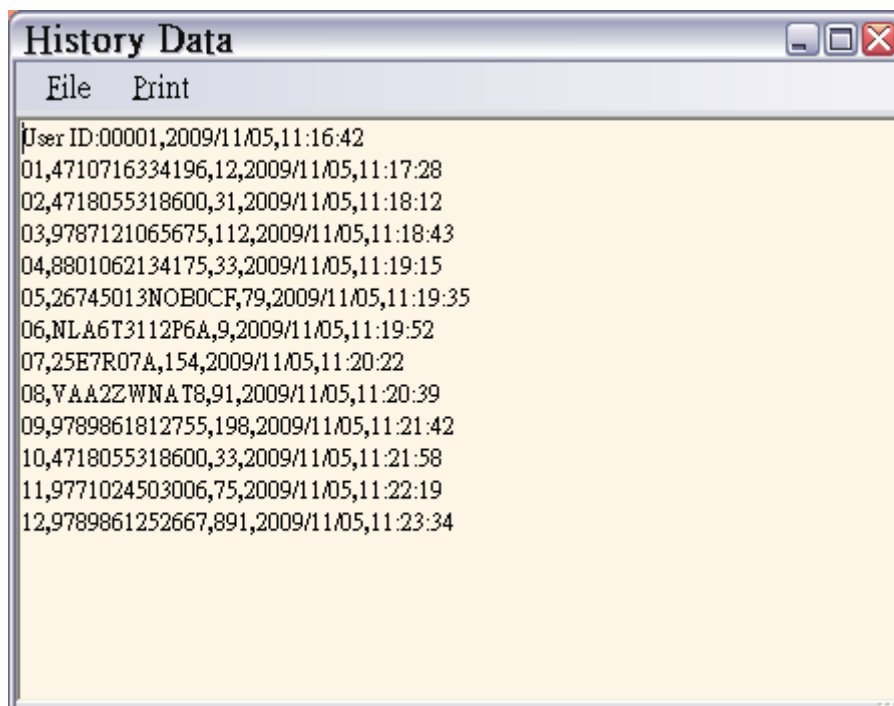

After viewing the data, the document can be saved via “File” in the function list or be printed by selecting the printer. If you choose to save the file in “CSV” form, you will see the vision below.

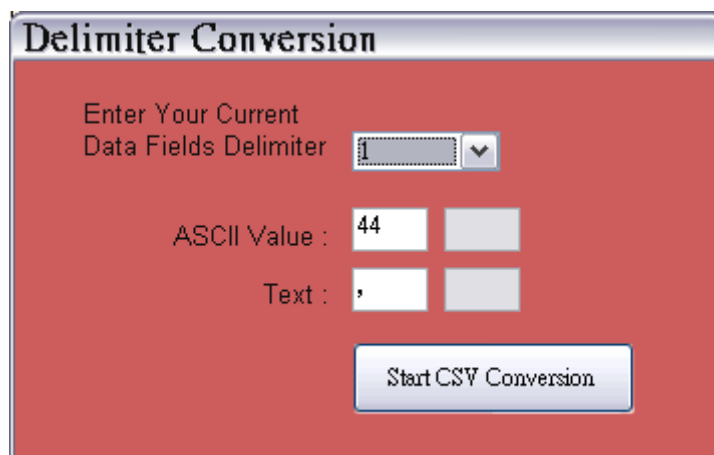

Key in your data field and the data terminator correctly and start the conversion.

Note: If the document is saved in fail when inspecting the file, you may find the backup document “BackupReceiveData.txt” in the BCP7000 program installation menu.