

AURORA

User' Manual

AS1225CD



CROSS CUT

AS1225CD

User's Manual

Thank you for purchasing cross-cut paper shredder of the AS1225CD Series. This product is ideal for home/personal and office use with its advanced function and design. This paper shredder will satisfy all your requirements for confidential and safe document disposal. Please read this manual carefully and keep it properly to ensure maintenance service of your paper shredder.

■ Operational Instruction

1. Connect the shredder with power resource in accordance with the power specifications indicated on the back label of the unit. Turn the switch to the "on/Auto" position, the stand-by green light indicator will be turned on and the shredder is ready for working. (FIGURE 1)
2. Place the paper in the insertion slot, the shredder will automatically start to shred paper and restore to the standby mode. When the process is completed, the motor will continue to rotate for 2-3 seconds to clean out paper scraps.
3. In the normal shredding process, if you suddenly change your mind and want to keep the remainder paper, you can turn the switch to the position "REV." The shredder will roll your paper out immediately.
4. If excessive paper has been fed at once, the shredder will stop as result of preset overload protection and the overload red light indicator will be turned on to give you warning of overload of papers. In this case, you should turn the switch to the state of "REV" at once and reduce the amount of paper to resume the shredding process. (FIGURE 2)
5. For continuous shredding in large quantity, it is recommended not to feed over the maximum sheet each time and minimize the consecutive using time to 5 minutes. Hence, you can properly protect your shredder for higher efficiency.
6. In the event that the shredder is run continuously for too long and the motor overheats, a thermal overload switch will automatically shut the power off. Turn the power off for a while. the shredder will then automatically resume to the standby mode.
7. If the paper being shredded is comparatively wet or with long fiber contents, group blades might be wrapped up with too much paper, which will affect the

efficiency of shredding. In this case, make the shredder running clockwise or counterclockwise in turn for two or three times by sliding the switch between the state of "On/Auto" and "Rev" for two or three times, wastepaper then can be cleaned automatically off those group blades, then reduce the paper quantity and resume to shred.

8. Since certain safety protection has been preset intentionally, the shredder can not be started up normally if the waste bin is not placed properly and the door open red light indicator will be turned on once the waste bin is pulled out. (**FIGURE 3**)
9. The shredder features for CD-ROM and credit card shredding. Please insert only one CD-ROM or one credit card per time to avoid damaging the blade
10. A thermal overload switch will automatically switch off shredder to protect the over-heated motor if run the shredder continuously more than 2 minutes. If this happens, move the switch to OFF position for about 30 minutes before restart shredding.

LED Standby Indiction



FIGURE 1

Overload Protection

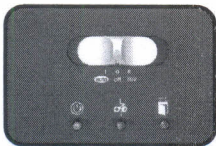


FIGURE 2


Door Open




FIGURE 3




LED DISPLAY

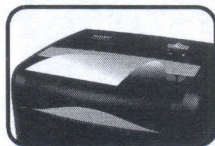

SHRED PAPER

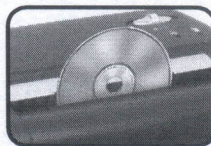

SHRED CD

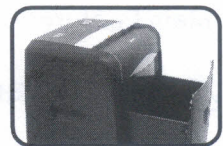

PULL OUT WASTEBASKET

■ Attention and Safety Instruction

1. Please locate the shredder at the place nearby power socket for quick power disconnection in emergency.
2. Please be aware of the safety alert label on the cover of shredder, ensure human body safety by preventing tie, jewelry or hair from being placed into the machine.
3. Please never place non-paper articles such as clip, plastic bag or cloth into the shredder to avoid shredder damage and lower the shredding performance.
4. While cleaning the shredder or waste bin, please turn the switch to the state of "off" and unplug the power. Please clean out the basket regularly.
5. In order to ensure long using life and good performance of the shredder, please do not run the shredder in the environment with heat or wet sources for a long time or feed over maximum sheet each time.

6. The maximum shredding sheet and continuous shredding time will be vary with quality of shredded paper or humidity & temperature of environment.
7. Do not renovate the internal structure of the shredder or power connection cable in any way by yourself. Do not use the shredder if machine or cable damaged, please contact our dealer or service center for assistance.
8. Please keep the shredder away from children and pets.
9. Never use any petroleum based or flammable oils or lubricants in or around the machine as some oils are combustibile Never spray any aerosol based products of any kind in or around shredder.

■ Main performance parameters.

Shred type:	Cross cut
Cut size(mm):	4×55mm
Capacity:	12 sheet (75g/A4)
Speed:	≥2.00 m/min
Throat Width (mm):	230
Waste Volume (L):	24
Unit Size (mm):	366×292×550
Net Weight(kg):	9.5
Main Feature:	Auto start/Overheat Protection/Overload protection

Important safety notes



Please read the instruction manual before using the shredder.



Do not spray or keep any aerosol products in or around shredder.



Avoid touching the document feed opening with hands.



Avoid loose clothing or jewelry touching the document feed opening.



Product is not intended for use by children. (product is not a toy).



Avoid getting hair near the document feed opening.



Do not insert foreign objects into the document feed opening.

AURORA

Aurora Office Equipment Co.,Ltd.Shanghai

No.388 jiaxin Road,jiading District,Shanghai

Tel:(021)59164588 Zip:201818

Http:www.aurora.com.cn

991291581Q