

# Operating Manual for Restaurant Pager AC-CTP300

## □. Main Functions:

1. Three prompt mode: flash, bell and vibrate.
2. Very easy to take, you can put a string on the pager to wear on the neck.
3. Very easy to operate, press the number on the keypad, the signal will send to the corresponding pager.
4. There is a card in the pager, you can write the pager's number on it.
5. How to find the corresponding pager?

When charging the pagers, press the number on the keypad, the up light on the corresponding pager will flash quickly at once.

## □. Setting

### 1. Setting Prompt Mode

When the pager is OFF, press and hold "STOP" to make the switch "ON", the prompt mode will change.

There are 4 prompt modes:

- (1). Flash, Bell, and vibrate
- (2). Flash and vibrate
- (3). Flash and bell
- (4). Flash

### 2. Register a number

- (1). Take down the plastic card, poke the "LEARN" key. When 3 light flash, press any number on the keypad, the registration is down after the light is disappeared.

### 3. Two ways to stop prompting

- A. Put the pager on the keypad
- B. Press "STOP" Key

4. When you don't need the pager, please make it "OFF", so that it will prolong its life span.