


RF CARD ACCESS MANUAL

1. Default door open password: #8888#
2. Default System password: *9999#
NOTE: all below setting need to login system menu to set!
3. Change System password: 0# >>new password>> # >>new password >># (4-6digits)
4. Change door open password: 92# >>new password >># >>new password >># (4-6digits)
5. Block password function; 43# (if set this function, door open password is useless. user can only swipe card to open lock)
6. Add master card: 80#>>swipe card(it quit system menu after setting master card)
7. Add user card by master card; swipe master card(then green light flash) >>swipe new cards>>swipe master card(it quit system menu after swipe master card).
8. Add user card by menu: 1# >>swipe new card one by one(if sound 2 short beep, it means add successfully. If sound a long beep, it means this card is already enrolled. Default door open password for each card is 8888)
9. Add user card by user ID: 2# >>swipe new card>>input user ID>>#After swipe new card, if sound 2 short beep, then input user ID(0001-9999), sound 2 short beep, then add card successfully. If sound a long beep, it means this card is already enrolled, or the user ID is already exist. Default door open password for each card is 6666).
10. Delete user card by menu: 4# >>swipe user card one by one
11. Delete user card by user ID: 5#>>input user ID>># (user ID: 0001-9999)
12. Delete all user card: 90#>>90#
13. Delete user card by master card; swipe master card twice within 3s (then it sound beep beep and red light flash)>>swipe user cards>>swipe master card(it quit system menu after swipe master card)

14. Set door open mode:
 - ① 40# card or password mode
 - ② 41# card + password mode
 - ③ 42# only password mode
 - ④ 43# only card mode
15. Set door open time: 60#>>input 1-99(it means 1-99s)>># (default is 3s, max is 99s)
16. Self-service adding card function: There are 2 methods.
 - ① 51#>>swipe new card>>52# (need to login system menu again).
 - ② 53#>>input card quantity(1-1012pcs)>>swipe new card (after swipe the last card, it quit system menu).
17. Set private door open password: #>>swipe user card >>new password >> # >>new password>># (4-6digits) , if door open mode is card + password mode, then no need to login system menu to do this setting.

Default Setting: cut off power>>press factory key>>connect power, after 2s it sound 4 short beep, then default setting successfully. (user card/master card not delete, System password change to default password 9999)

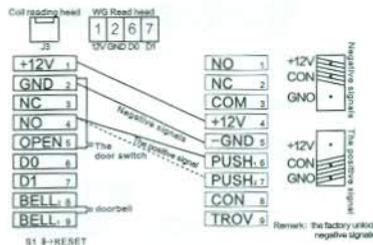

感应卡密码门禁说明书


1. 开门密码: #8888# (开门密码)
2. 编程密码: *9999# (编程密码)
注: 以下所有设置必需进入管理编程后再进行!!!
3. 修改编程密码: 0# 新密码#新密码# (4-6位任意数字)
4. 修改开门密码: 92# 新密码#新密码# (4-6位任意数字)
5. 屏蔽密码: 43# (出厂密码为开、启用后只能刷卡密码无效)
6. 增加管理卡: 80# 刷管理卡后自动退出编程。
7. 母卡加卡: 刷一次管理卡1.5秒后绿灯快速闪刷要增加的用户卡再刷一次管理卡退出
8. 快速加卡: 1# 连续刷要增加的用户卡# (每刷一张卡后如果听到滴滴两声、表示此卡已增加成功, 如果听到一声长响表示此卡已存、接着刷下一张卡即可、每张卡配的默认密码为 #8888#此密码只能用在卡加密码模式下)
9. 编码加卡: 2#刷新卡, 输入4位编号#每刷一张卡后如果听到滴滴两声、表示此卡已增加成功, 如果听到一声长响表示此卡已存、接着刷下一张即可, 每张卡配的默认密码为(6666)此密码只能用在卡加密码模式下。用户编号为(0001-9999)不可重复4位数字, 输入编号后如果听到一声长响, 表示此编号已存在或不足4位数、请重新输入, 直到听到到滴滴两声即可
10. 快速删卡: 4# 连续刷要删除的用户卡
11. 编码删卡: 5#输入4位编号#(编号范围: 0001-9999)
12. 全部删除: 90#90#清除全部用户卡
13. 母卡删卡: 3秒内快速刷母卡两次后, 听到滴滴两声响红灯快速闪刷要删除的用户卡; 再刷一次管理卡退出当前模式

14. 设置开门方式:
 - ① 40#卡或密码开门
 - ② 41#卡+密码开门
 - ③ 42#仅密码开门 (屏蔽卡开门)
 - ④ 43#仅刷卡开门, 屏蔽密码
15. 设置开门延迟: 60# (1-99秒) # (出厂为3秒, 99为最大值)
16. 自动值守添加用户卡:
 - ① 51# 开启 (刷新卡, 卡信息存入)
 - ② 52# 关闭(进入编程后再操作)
 - ③ 53# 卡数量 (数量范围1-1012) 达到数量后自动关闭
17. 设置 (卡+私人密码): #刷卡, 新密码#新密码# (4-6位任意数字), 在卡加密码模式下, 无需进入编程模式操作此项

恢复出厂编程密码: 断电状态, 按住出厂键(factory)后通电, 2S后听到滴4声, 即恢复编程密码成功。(用户/管理卡不变)

备注事项: 门禁专用电源接线图

1. 在接线时请切断电源, 勿带电操作!
2. 正常情况下电锁是从电源控制器接出。

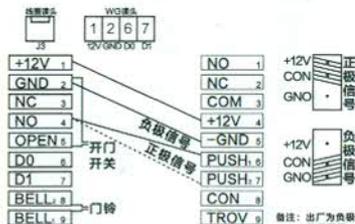

S1 非→恢复出厂设置

备注: 出厂为负单信号开锁