

4 Cashluxe

RS-232 version, DB9 Pin Assignment

Pin	Name	Description
3	Rx	Activation data from host.
5	Gnd	Ground
9	Status	Status of drawer open sensing switch. Check through the R1 status.

For no-sensor version, an option allows using +12V from pin9, which is available with certain specially configured RS-232 ports, eliminating the need for an AC adapter.

DC supply jack for RS-232 models

+12V Gnd

To open the drawer through COM1 under QBASIC:

```
OPEN "COM1:300,N,8,1"  
FOR RANDOM AS #1  
PRINT #1, "00000000000"
```