

What is OA101+

- Office desktop system, No.1 in the world! Plug and play. Easy installation and simple operation system
- Up-to-date exquisite design, blue LCD. Small and elaborate appearance.
- Stand-alone, fast identification speed. Standard USB communication.
- Several verification modes: fingerprint only ,ID + password, ID + fingerprint,
- FP capacity: 512, record capacity: 32000.
- Simple version attendance management software is for free.

Why it is OA101+

“OA101+” is totally updated based upon “OA101+”:

New platform ---- Adopt the newest US TI DSP and more stable updated USB comm. IC.

New structure ---- Adopt double DSP structure and corresponding excellent identification algorithm. Enable attendance during communication..

New speed ---- It only takes 0.6 s to identify FP under FP capacity 512 full, 4.5 times faster than previous identification time.


OA101+ Driver Operation Guide

You need to install the driver before OA101+ is to communicate with pc. The detailed steps are as follows:


1 Driver Installation

Method 1: Installation with Management Software.


After the installation of management software, an information about driver installation has appeared:

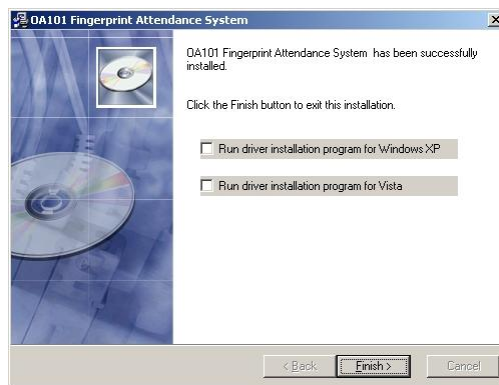


Choose the driver for your PC's operating system, for example: Run driver installation program for Windows XP, then the driver install wizard window will pop-up.

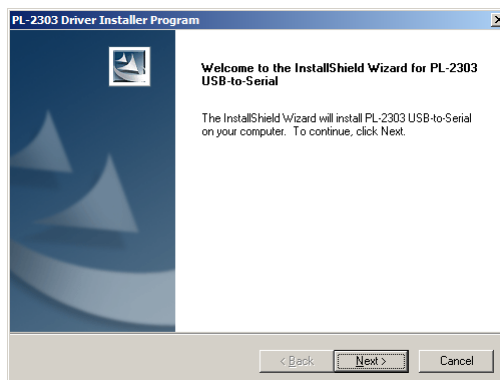

Click **【Next】** button, the interface will show as following,

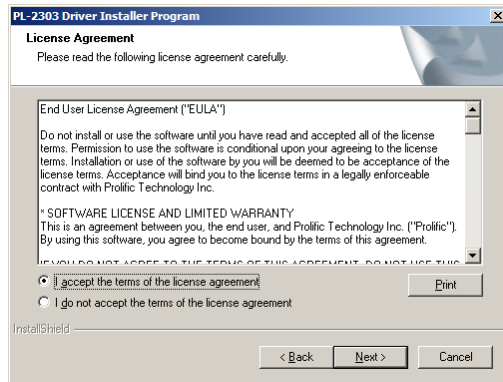

Choose **【I accept the terms of the license agreement】** button, Click **【Next>】** button to install driver. After installation completed, the following window will show as below.

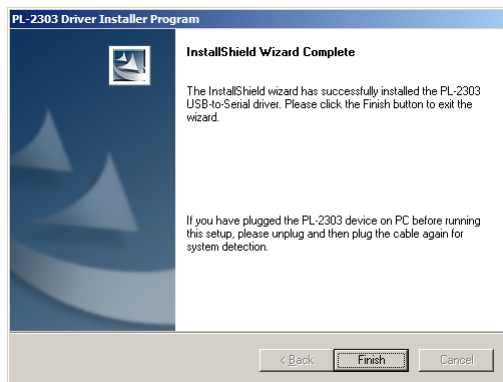

Click **【Finish】** button and exit install interface.

Method 2: Use the setup Installation directly.

Double Click the  in the CD (G:\Driver\Winxp), and the driver install wizard window will pop-up. Click 'Next' and 'Next' button to finish the installation.


After completed, connect unit to PC with USB serial cable. The right-below corner of PC will appear "find new hardware" hint message. When appearing 'new

hardware install ok and can be used', which indicates that the connection from unit to PC is successfully, the unit can start communicating to PC.


2 Driver uninstall

There are two ways of uninstalling driver:

1). Open **【start】- 【control panel】- 【Add/remove program】**, choose 'PL-2303 USB-To-Serial' option. The interface is as following,

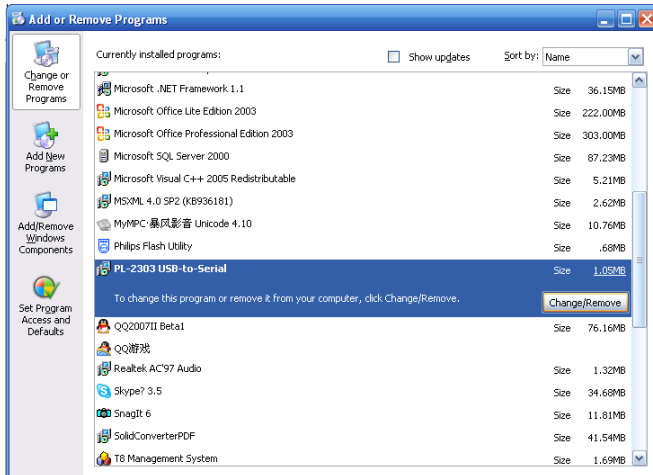


Click **【Modify/remove】** button, the interface below will pop-up.

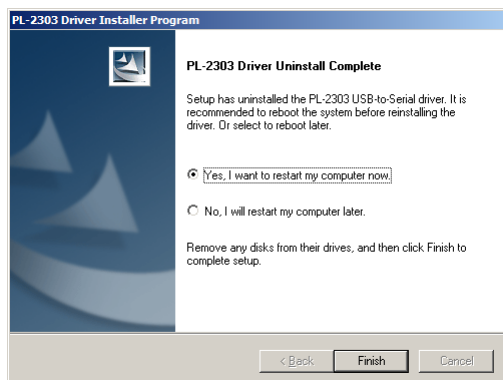

Choose **【Yes, I want to restart my computer now.】**, Click **【Finish】** button to uninstall driver program. Computer will be auto-restart.

Choose **【No, I will restart my computer later】**, Click **【Finish】** button to uninstall driver program.

2). Double click  **PL-2303 Driver Installer**
Prolific Technology, Inc. , open the interface below,

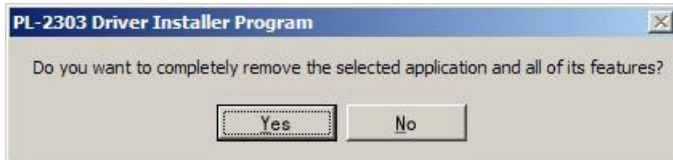

Click **【Yes】** button to delete the driver program; Click **【No】** button to cancel driver deletion. The interface will show like below:



Choose **【Yes, Yes, I want to restart my computer now.】**, click **【Finish】** Click **【Finish】** button to uninstall driver program. Computer will be auto-restart.

Choose **【No, I will restart my computer later】**, Click **【Finish】** button to uninstall driver program.