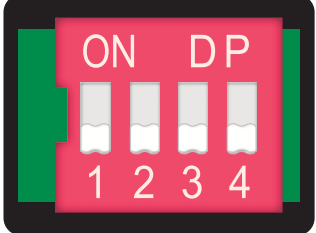 
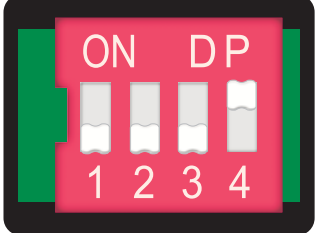 
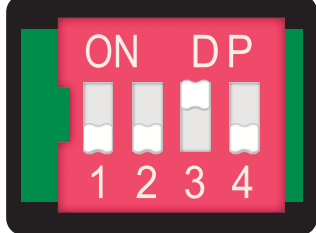 
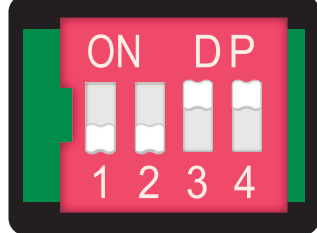 
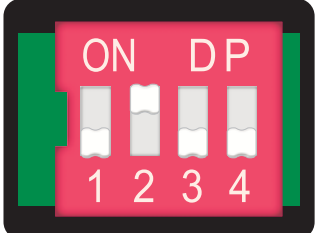 
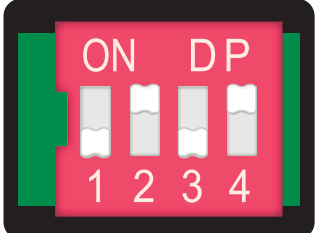 
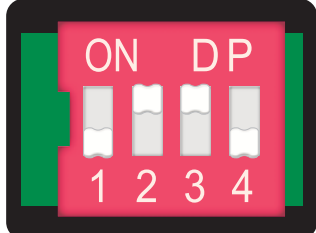 
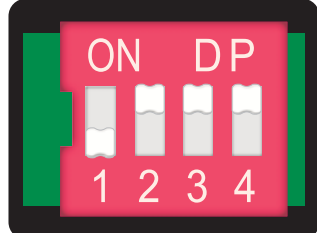 
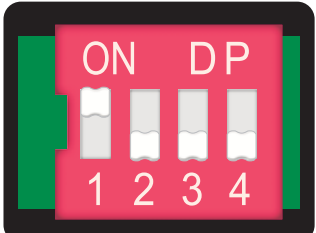 
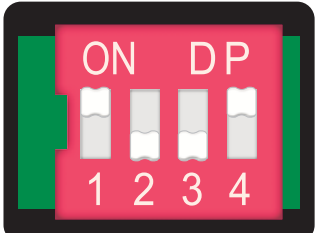 
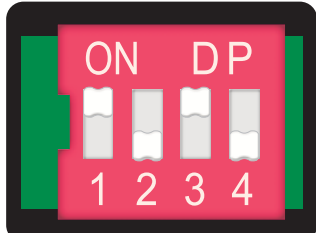 
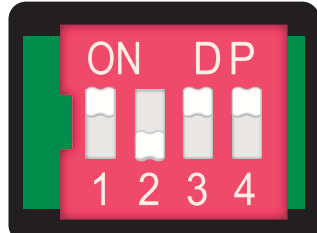 
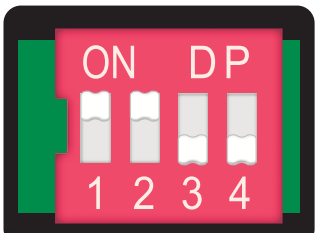 
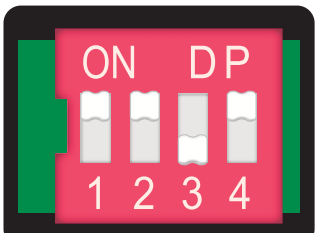 
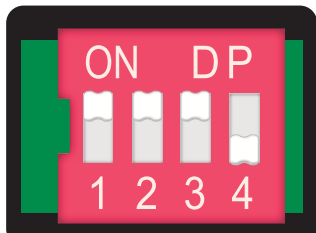 
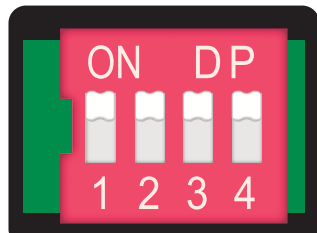 


PR500 Desktop EM Reader

Output format instruction:

0  8H 10D+ 1H 10D+2H 10D	1  8H 16D	2  2H 10D+4H 10D	3  8H 16D
4  6H 10D	5  8H 16D	6  8H 16D	7  10H 16D
8  8H 10D	9  8H 16D	10  8H 16D	11  6H 16D
12  8H 16D	13  00+6H 10D	14  8H 10D (remove the first 2 digits, only output 8digits)	15  4H 10D+4H 10D