



**GP-80250 N SERIES
THERMAL RECEIPT PRINTER**

GPOPOS SETUP GUIDE


REV. 1.0

1. GETTING INITIAL PRINTER PARAMETERS

Run the printer self test to get initial printer parameters.

- Make sure the printer is turned off;
- Press and hold the FEED button while turning on the printer;
- Release the FEED button after the Paper indicator is off;
- Printer print out the self test page.

The initial printer and Ethernet settings are shown on the self test page, as below,

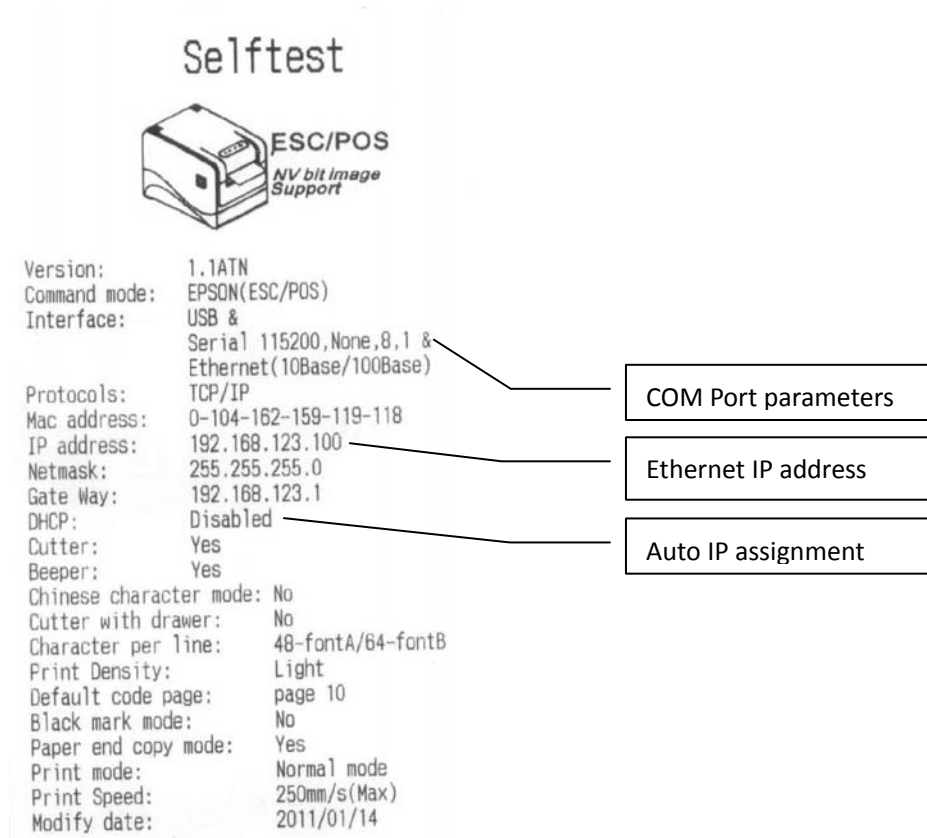


The default printer Ethernet IP address is 192.168.123.100 and IP assignment method is manual (DHCP: Disabled).


2. GPOPOS LDN SETUP


After installing the GPOPOS driver, run AdminTool.

- a. Select one of the model names in Device Model list.

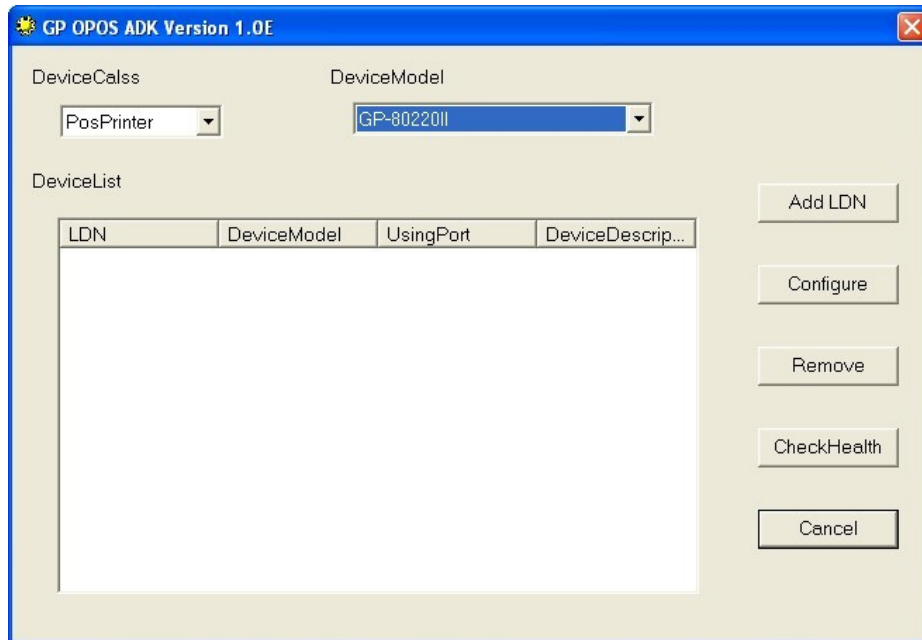

- b. Click Add LDN. Input LDN name and select Port accordingly.

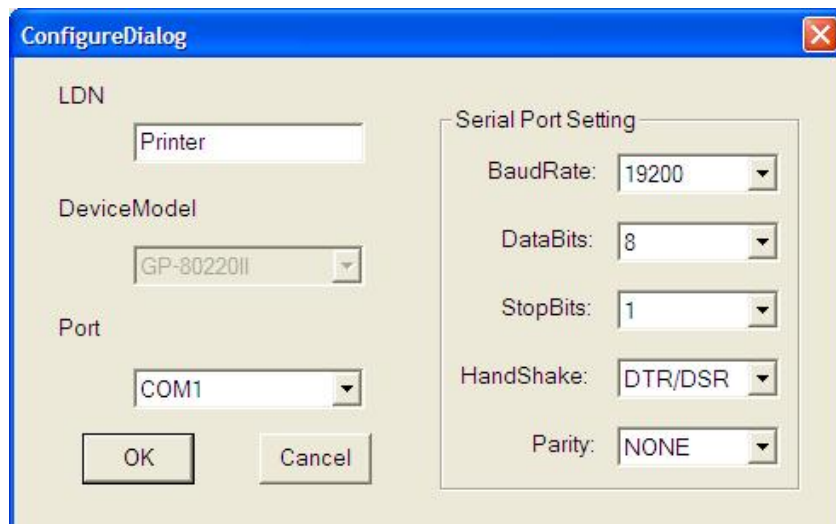


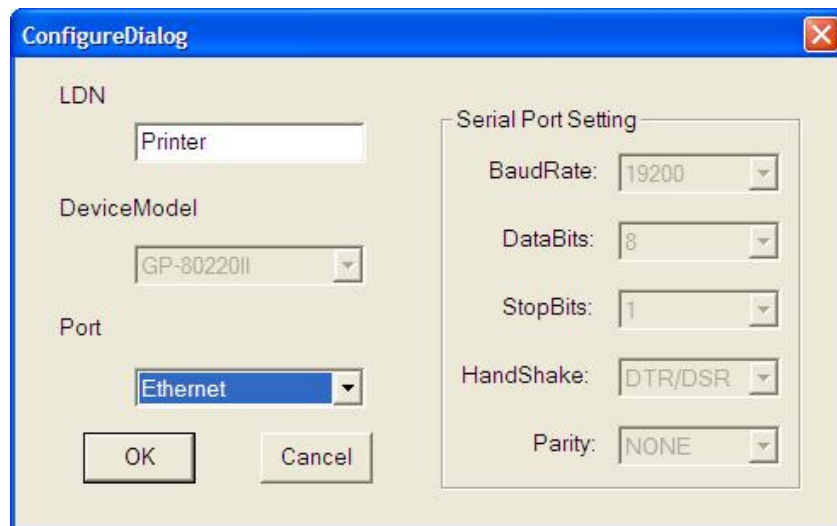


- c. If it's Ethernet port, input the IP address into the Net Config Dialog.




- d. The port name is changed to the "IP_192.168.123.100". Click OK.

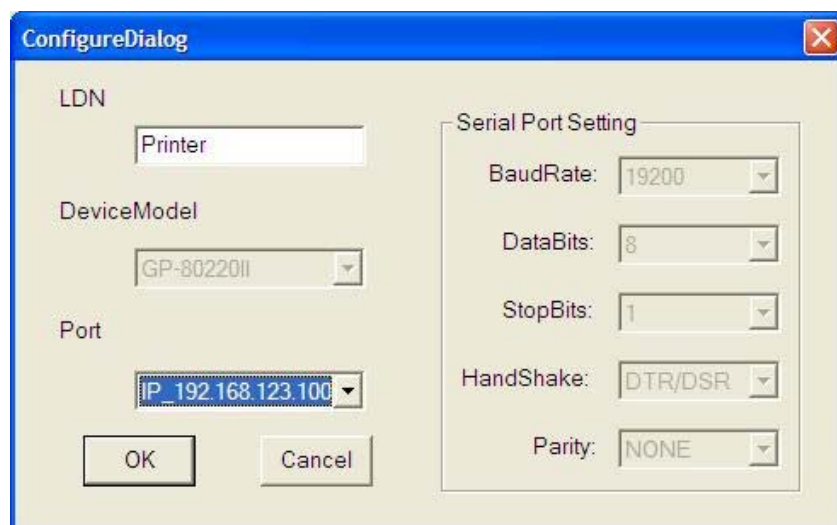


- e. Choose the LDN and click Check Health to check if the connection is established.

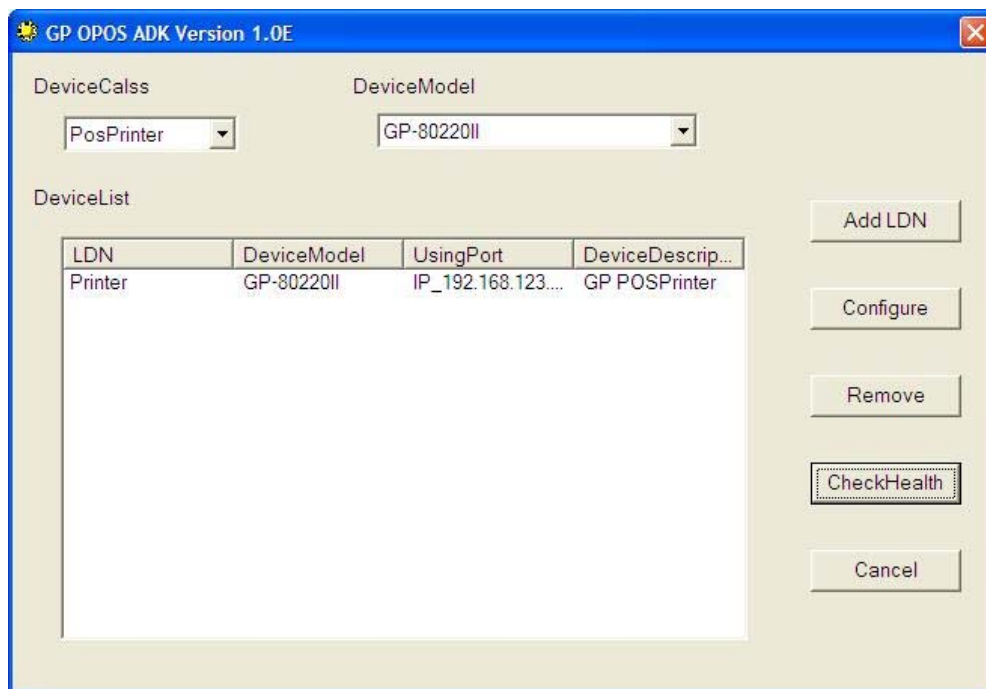

- f. Click Push to Start CheckHealth to run the test.

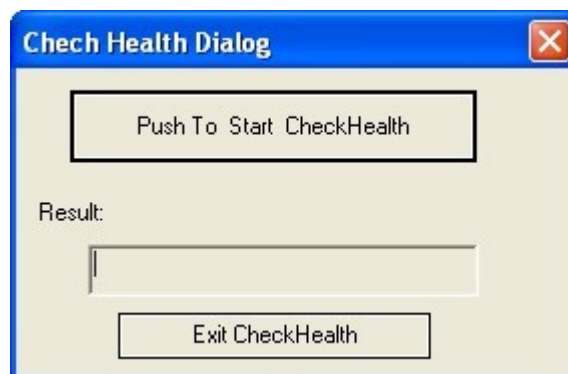

- g. If the result shows OPOS_SUCCESS, the connection is established successfully.

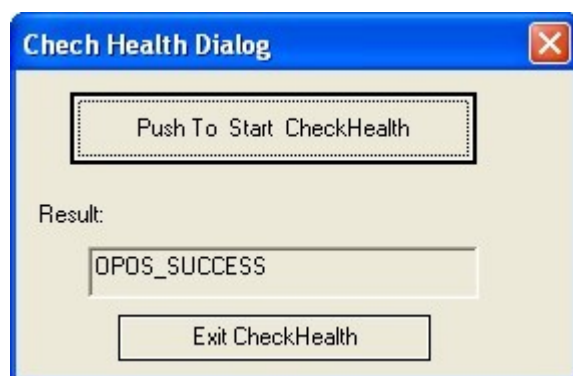

- h. In the same time, the printer will print out the successful result as well.

```
Interactive Check SuccessFu1  
PosPrinter OPOS Driver  
The ServiceObjectVersion = 1.7
```